

Quick Installation Guide


Wireless N Broadband Router

Suitable for: N150RH, N150RT, N151RT, N300RH, N300RT, N302RE, N302RT

V2.1502

Copyrights © 2015 by TOTOLINK All rights reserved. Website: <http://www.totolink.net>. Information in this document is subject to change without prior notice.

1 Hardware Installation

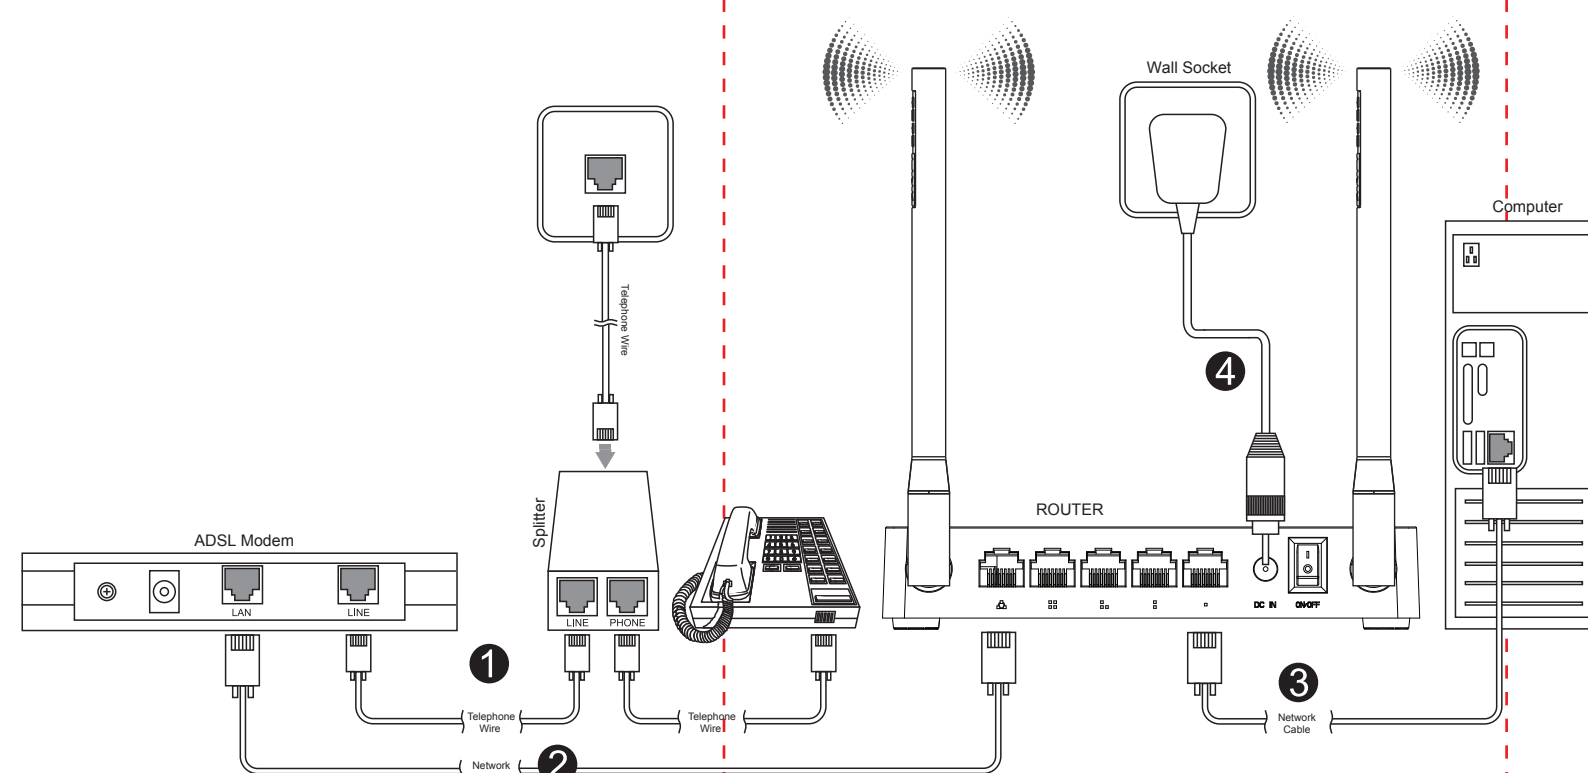

LED Indicators

POWER	Light on when router is power on.
CPU	Light is on when systems is working.
WIFI	The indicator light is on when Wi-Fi is enabled.
WAN	Light on when WAN port connected successfully.
1/2/3/LAN	Light on when the LAN port successful connected.
	Light blinking while transmitting or receiving data.

Ports Description


DC IN	Used for connecting the power adapter.
ON/OFF	Used for power on or off the router.
1/2/3/LAN	Used for connecting the router to local PC.
WAN	Used for connecting the router to the Internet.
Reset/WPS	Reset: Press the button for more than 5 seconds, the router will restore factory settings.
RST-WPS	WPS: Press the button less than 5 seconds, enable the router WPS function.

NOTE:


1. Please disconnect the power adapter and all cables during thunderstorm weather.
2. Keep away from heat source and keep well ventilated.
3. Please pay attention to the waterproofing and moisture-proof when storing, transporting and running.
4. The power supply must reach the rated current and power.
5. Put the router in flat places.

2 Set Up PC

Windows Vista/7 For Windows Vista or Windows 7 Operating System, please comply with following steps to set up.


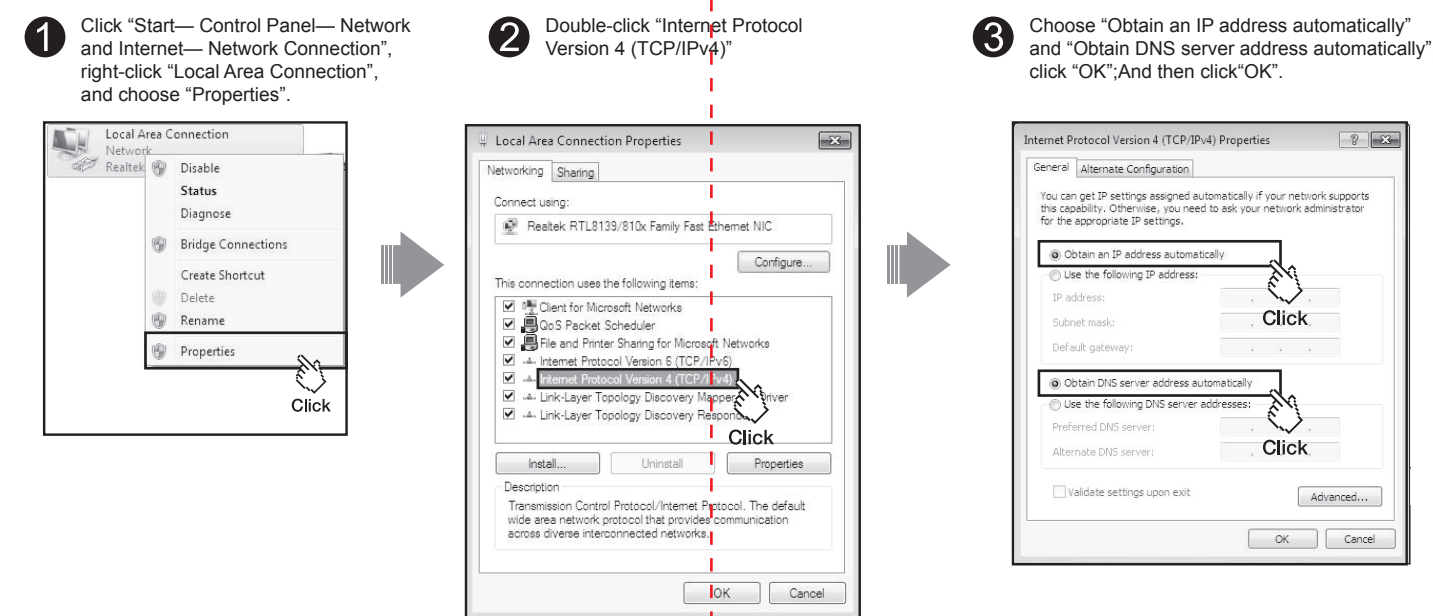


Windows 8 For Windows 8 Operating System, please comply with following steps to set up.

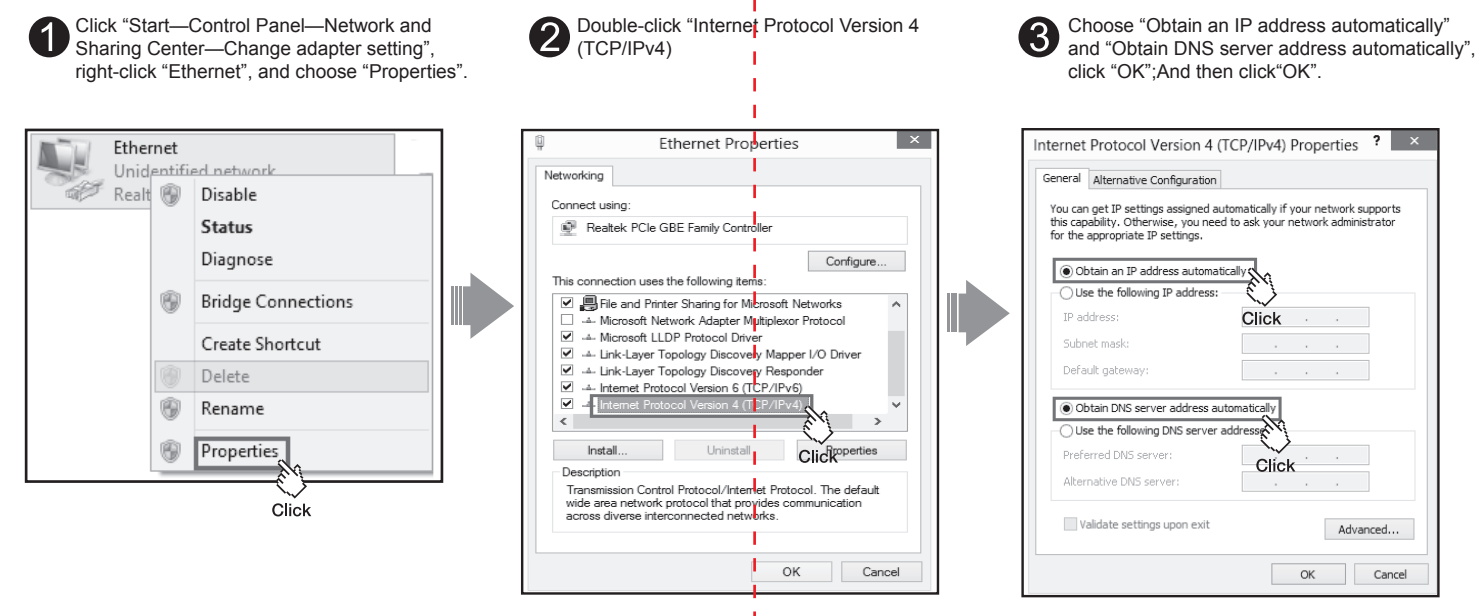

3 Set Up Router

Please set up the router following below steps.

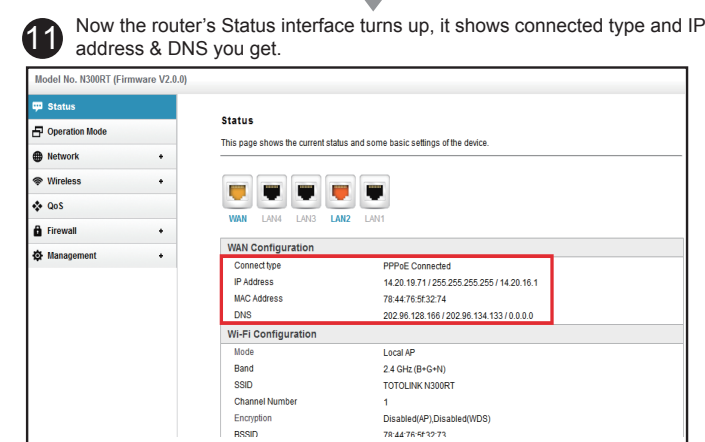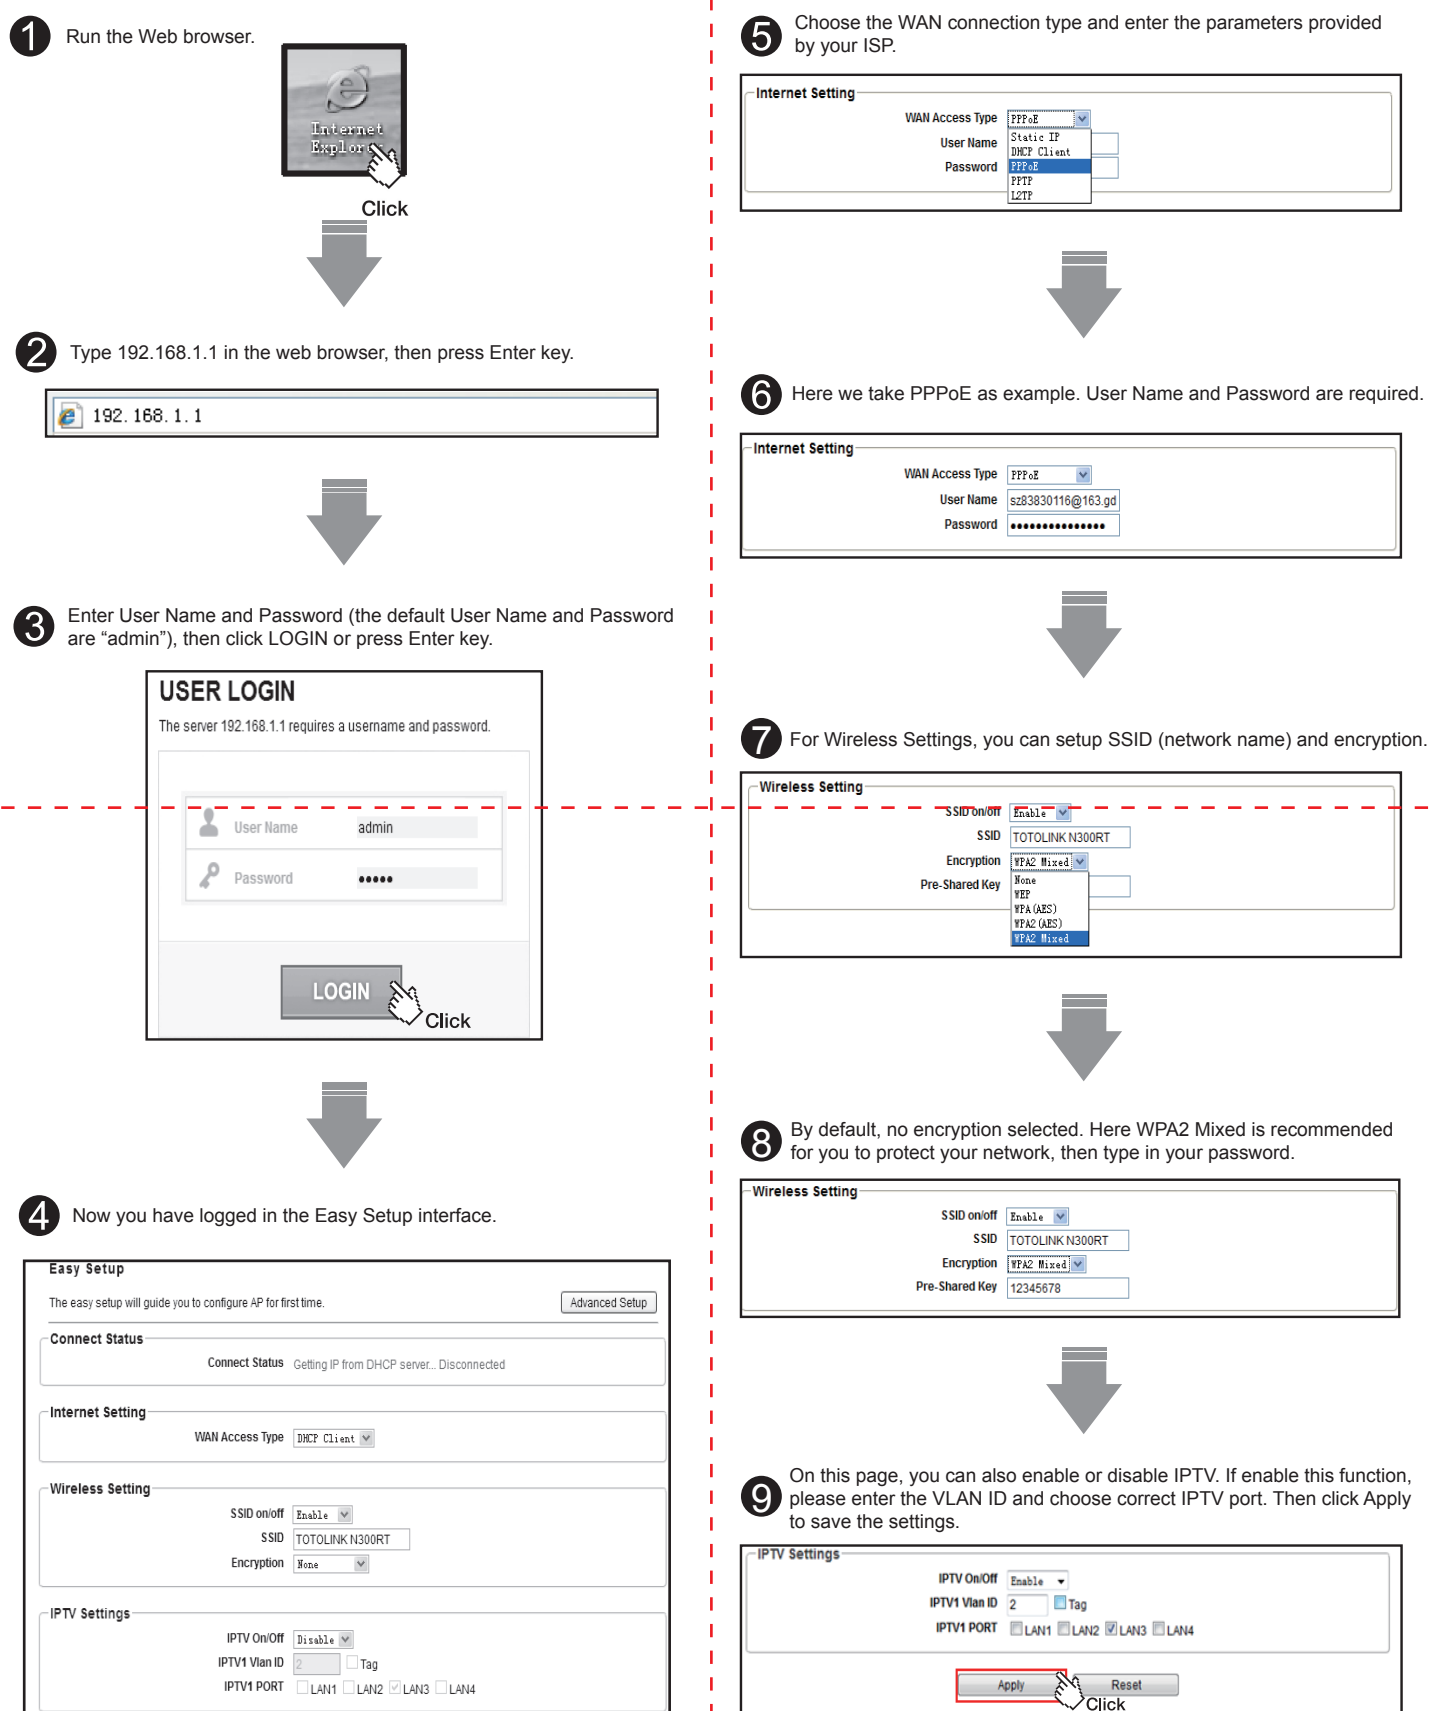

NOTE:

After you set the Pre-Shared Key, please remember your SSID and the Pre-Shared Key to connect with your wireless LAN. Press for about 2-3 seconds, the system LED indicator keep solid light, it means WPS working, while press for about 10 seconds, all LEDs blinks quickly, the device will restore to factory default settings.

4 FAQ

- How to reset the router to default settings?**
 1. Please make sure your router's power is on regularly, then press the RST-WPS button for about 10s.
 2. Loosen the button until your router's LED lights all flashing, then you have reset your router to default settings.
- Forget the password?**

Please reset your router to default settings firstly, and set a new password. Both of the default Username and Password are admin. The default IP is 192.168.1.1.